


NOTES:

1. DESIGN, MATERIAL, AND CONSTRUCTION GUIDELINES TO FOLLOW ICPI GUIDE SPECIFICATIONS
2. DAYLIGHT DRAIN PIPE TO DRAINAGE SWALE. USE POP-UP DRAIN IN YARD (AS SHOWN) OR CONNECT TO STORM SEWER.
3. APPLY WATERPROOF MEMBRANE VERTICALLY AGAINST HOUSE FOUNDATION PRIOR TO PLACING SUBBASE AND BASE.
4. ALL SOIL SUBGRADES SHALL SLOPE TOWARD STREET.
5. SUBGRADE SOIL MAXIMUM CROSS SLOPE IS 0.5%. MAXIMUM LONGITUDINAL SLOPE IS 2% TOWARD STREET.
6. USE SOIL BERMS FOR LONGITUDINAL SOIL SUBGRADE SLOPES EXCEEDING 2% TOWARD STREET.
7. 5% MAXIMUM SURFACE SLOPE.
8. CAST-IN-PLACE CONCRETE CURBS CAN BE WITHOUT PAVERS ON TOP, IN SUCH CASES, CURBS SHOULD BE LEVEL WITH CONCRETE PAVER FIELD.
9. THICKER SUBBASE AND/OR ADDITIONAL DRAIN PIPES MAY BE REQUIRED IF DRIVEWAY RECEIVES RUNOFF FROM ADJACENT IMPERVIOUS SURFACES OR ROOFS.
10. NO. 2 STONE MAY BE SUBSTITUTED WITH NO. 3 OR NO. 4 STONE.

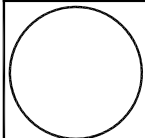

**PERMEABLE INTERLOCKING CONCRETE
PAVEMENT DRIVEWAY WITH CONCRETE CURBS**

DRAWING NO.	ICPI-80
SCALE	NO SCALE